# ASSEMBLY INSTRUCTION

# **SHELF CRANE**










X6 X36









X12 X36 X12



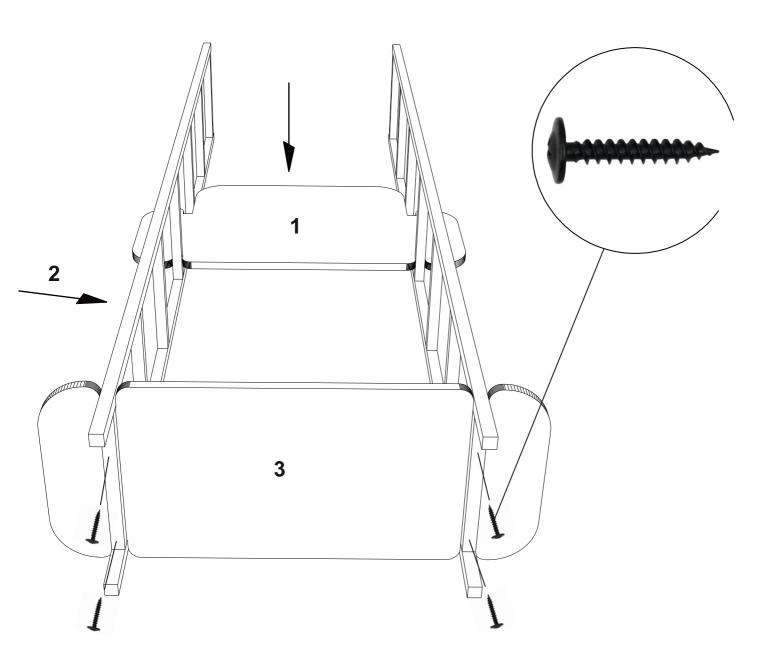


## IMPORTANT:

PUT COMPUTER TABLE BETWEEN METAL LEGS BEFORE INSTALLING THE SCREWS

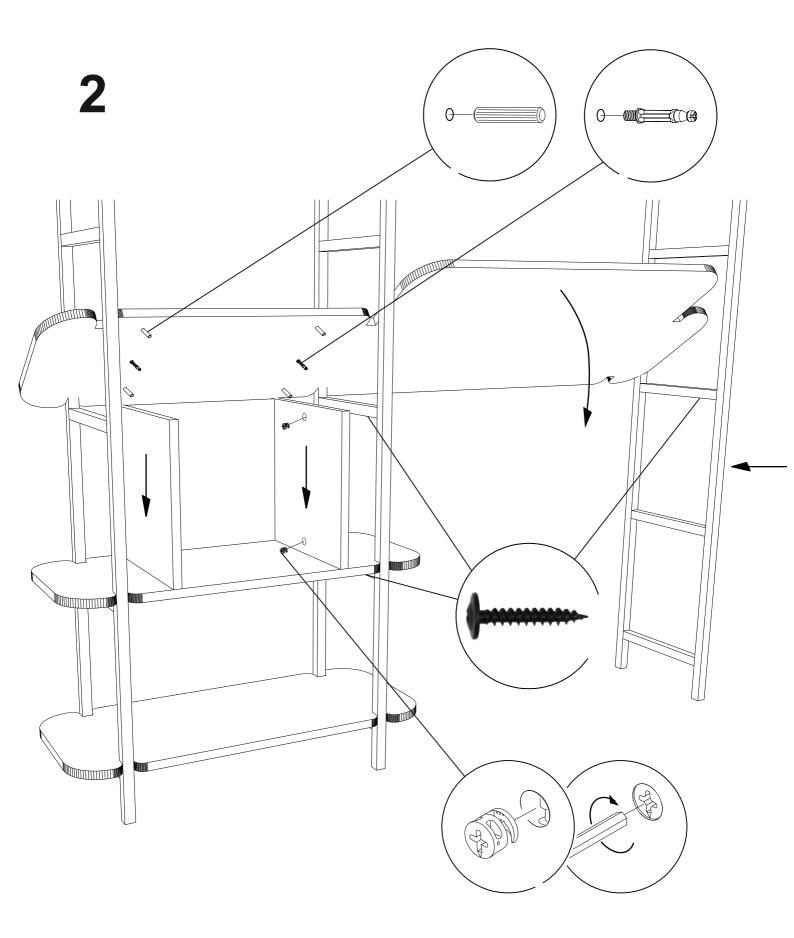

### IMPORTANT:

PUT COMPUTER TABLE BETWEEN METAL LEGS BEFORE INSTALLING THE SCREWS

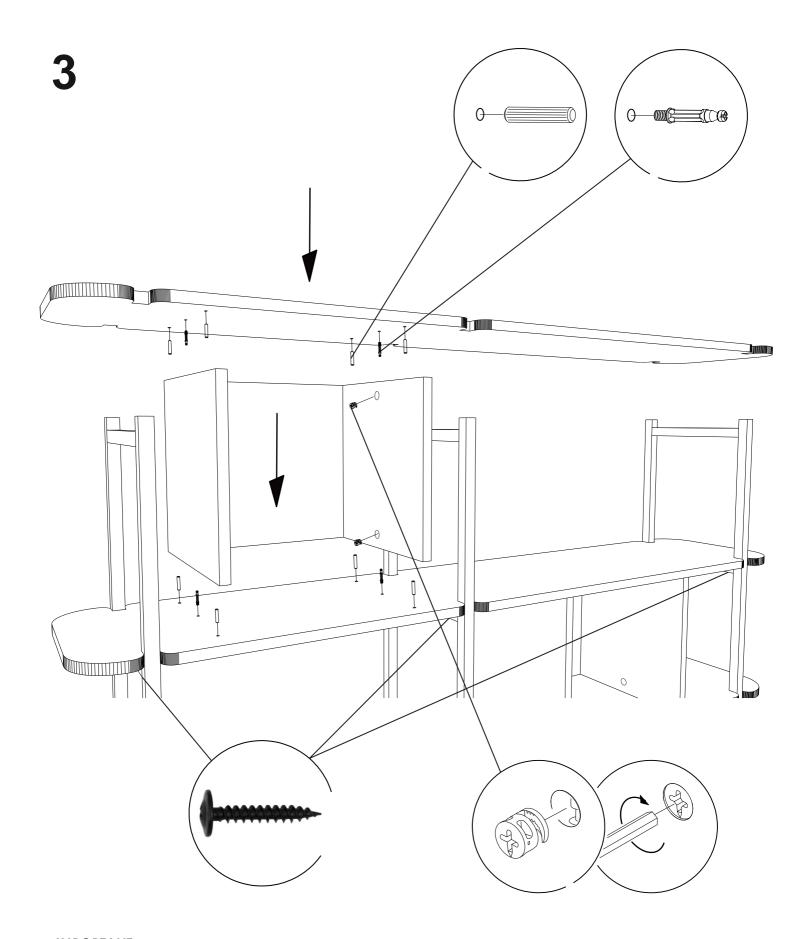

### **IMPORTANT:**

INSTALL ALL OTHER LEVELS FROM BOTTOM TO TOP AND THEN FIX WITH SCREWS.

